


Panasonic

Operating Instructions Professional Facial Hair Trimmer Model No. ER-RP40

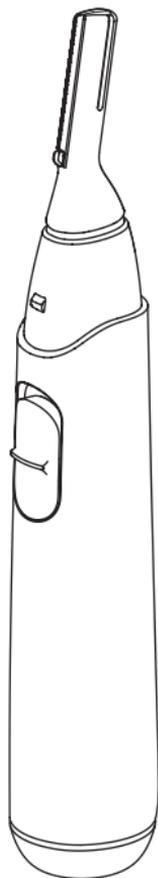

Operating Instructions
Professional Facial Hair Trimmer
Model No. ER-RP40

Contents

Safety precautions	5
Parts identification	9
Installing the battery	10
How to use	11
Removing and mounting the attachments.....	12
How to use with attachment.....	14
Maintenance.....	15
Removing and mounting the blade.....	16
Troubleshooting	17
Specifications	17

Thank you for purchasing this Panasonic product.

Before operating this unit, please read these instructions completely and save them for future use.

WARNING

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Safety precautions

To reduce the risk of injury, loss of life, electric shock, fire, and damage to property, always observe the following safety precautions.

Explanation of symbols

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

	WARNING	Denotes a potential hazard that could result in serious injury or death.
	CAUTION	Denotes a hazard that could result in minor injury or property damage.

The following symbols are used to classify and describe the type of instructions to be observed.

	This symbol is used to alert users to a specific operating procedure that must not be performed.
	This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.



WARNING

► Preventing accidents

Do not store within the reach of children or infants. Do not let them use it.



- Putting parts or accessories in the mouth may cause an accident or injury.

→ Store with the protective cap attached after use.



Immediately stop using if there is an abnormality or malfunction.

- Failure to do so may cause fire or injury.



CAUTION

► To protect skin

Do not use in the following cases:



• People with sensitive skin

• People with skin allergies

Do not use on areas with pimples, etc.

- Doing so may result in injury to the skin.

Do not press the appliance forcibly against the skin.



Avoid repetitive shaving of the same area.

Do not pat the appliance during use.

- Doing so may result in pain, inflammation or injury of the skin.

Do not press the blade by force. Do not touch the blade directly with your fingers or nails during use.



use.

- Doing so may cause injury to the skin or shorten the blade life prematurely.



CAUTION



Check the blade for deformation or damage before use.

- Failure to do so may cause skin injury.



When removing the protective cap, grasp it by the central part and pull it outward.

- Failure to do so may cause the blade to cut your hand.



Use the appliance only for shaping eyebrows, beard, downy hair, nape of neck, sideburns.

- Failure to do so may cause injury.



If there is any abnormality on skin after use, stop using the appliance and consult a dermatologist.

- Failure to do so may cause symptoms to worsen.



Be sure to attach the protective cap when carrying the appliance around or storing it.

- Failure to do so may cause injury to the skin or shorten the service life of the blade.

► This appliance



Do not drop or subject to shock.

- Doing so may cause injury.



Do not modify, disassemble or repair.

- Doing so may cause an accident or injury.

→ Contact an authorized service centre for repair.



CAUTION

► The battery

Do not throw into fire or disassemble.



The supply terminals are not to be short-circuited.

- Doing so may cause a burn or injury.

Always follow the cautions printed on the battery.

Check the polarity of the battery (+ and -) and install it correctly.

Exhausted battery is to be removed from the appliance and safely disposed of.




Remove the battery when not using the appliance for an extended period of time.

Use the battery by the recommended use-by date.

Non-rechargeable battery is not to be recharged.

- Failure to do so may cause overheating or explosion of the battery, injury or contamination of surroundings due to leakage.

Parts identification

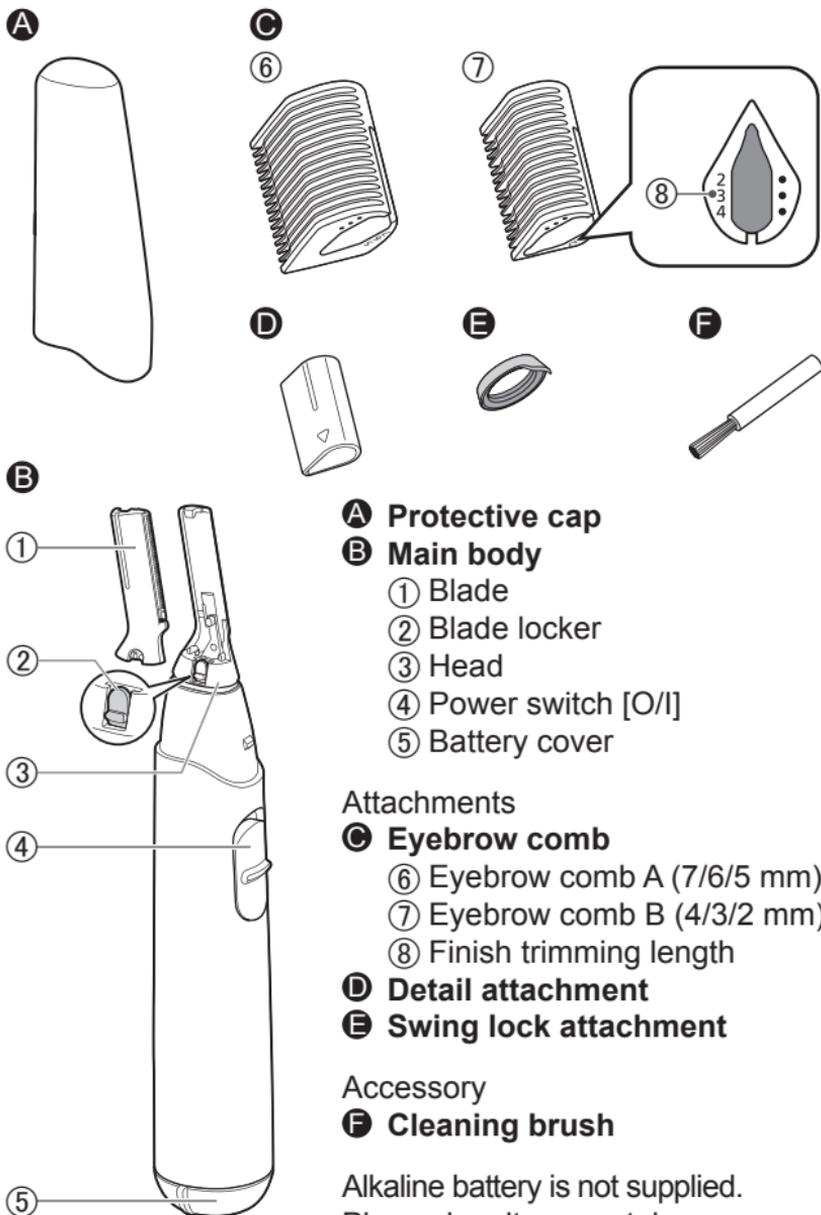

Alkaline battery is not supplied.
Please buy it separately.


Installing the battery



- Make sure that the main body is turned off.

1. Remove the battery cover.

Turn the battery cover in the direction of the “①” arrow until the battery cover is removed.

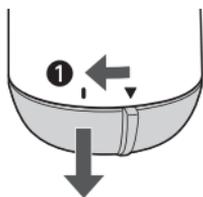


2. Check the polarity (+ and -) and install the battery.

Thoroughly wipe the main body to prevent water droplets from getting inside when installing the battery.



3. Attach the battery cover.

- ① Align the “(a)” on the battery cover with the “|” mark and insert the battery cover.
- ② Rotate the battery cover until the “(a)” is aligned with the “▼” mark on the main body.

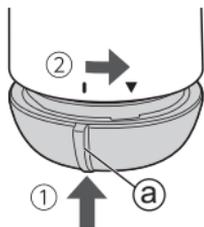


Notes

- You can use the appliance for approximately 180 minutes with one Panasonic LR6 (AA alkaline battery). (when dry use in a room temperature of 20 °C.)
The use time will differ depending on the frequency and method of use.
- Be sure to use LR6 (AA alkaline battery).

How to use

- You should not allow permanent wave lotion, hair dyeing or hair spray to come into contact with the main body or the blade.

Doing so may result in cracking or corrosion.

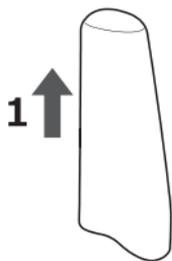


1. Hold the protective cap to pull it out.


2. Turn on the power switch, and start trimming.

- **Lay the blade flat on the skin.**

(How to use with attachment, see page 14.)

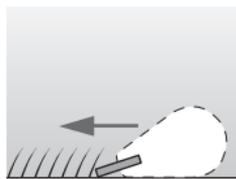

Skin

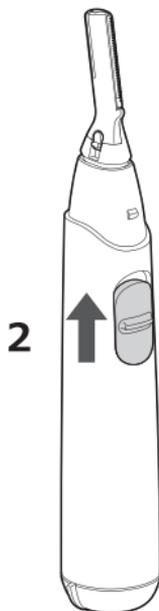

Trimming wet hair

- Do not use the eyebrow comb and detail attachment when trimming wet hair.
- Wet and apply soap beforehand to the area to be shaved.

3. Slide the power switch to off position at the end of each use.

- **Clean the appliance after each use.**
 - Failure to do so may cause blade to lose sharpness.
- (See page 15)


Removing and mounting the attachments

- Make sure that the main body is turned off.

Eyebrow comb and detail attachment

How to mount

Align the “●” on the eyebrow comb or the “▽” on the detail attachment with the groove (b) of the blade, and insert it directly into the blade until a click is heard.

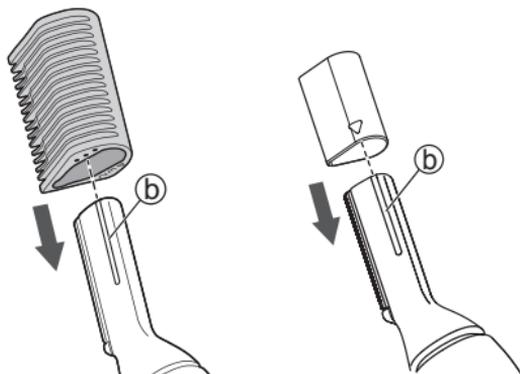

How to remove

Remove it straightly.




Swing lock attachment

Attach it to lock the swing of the head.

- Be careful not to touch the blade when mounting or removing it.

How to mount

Insert the swing lock attachment as shown in the figure, and pull it by pinching the rib (c) so that it covers the groove (d).

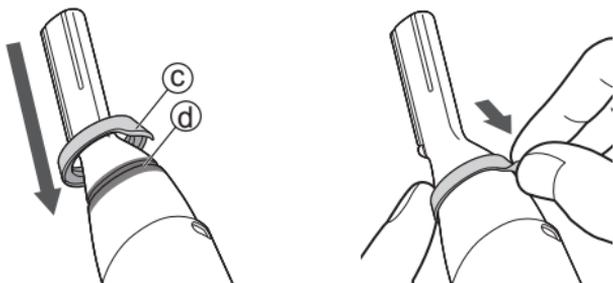

How to remove


Remove it by pinching the rib.



How to use with attachment

Eyebrow comb

Press the plane surface of the eyebrow comb close to the skin to trim.

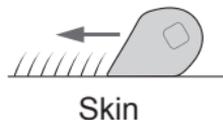

Move it slowly from the tail to the start of eyebrow. Repeat this step until the eyebrows are trimmed to the desired length.




Detail attachment

Press the plane surface of the detail attachment close to the skin to trim.


- Above the eyebrows
Stop trimming at about 2 mm to 3 mm to the side of the eyebrow.



- Below the eyebrows
Press the eyelid gently and stretch the skin while trimming.

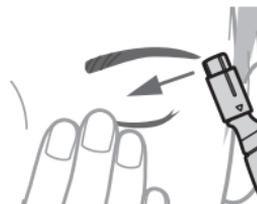

- Between eyebrows
Trim in the direction of the arrow.

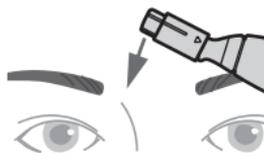

Maintenance

- Make sure that the main body is turned off.
- Be sure to clean the appliance with the battery cover attached.
- The blade can't be disassembled.

Wet cleaning

- 1. Remove the blade and attachments (See pages 12 and 16) and rinse under running water.**
 - Cover the drainage outlet of washbasin to prevent the blade from flowing away.
 - If you are concerned about the dirt, wash it off with hand soap or the like.
- 2. Shake up and down several times to remove the water.**
 - Be careful not to hit the main body on the sink or any other object while draining the water. Failure to do so may cause malfunction.
- 3. Wipe off the water with a towel and let it dry naturally.**
 - It will dry faster with the blade removed.

Dry cleaning

Brush off any remaining hair trimmings.




► Notes

- Do not use thinner, benzine, alcohol or other chemicals.
Doing so may cause failure, cracking or discoloration of the main body. Wipe the main body only with a soft cloth slightly dampened with tap water or soapy tap water.
- After cleaning, attach the blade and the protective cap.
- Store the main body in a place with low humidity after use. Failure to do so may cause malfunction due to condensation or rust.

Removing and mounting the blade


- Press the head with your fingers to avoid excessive vibration.
- Make sure that the main body is turned off.

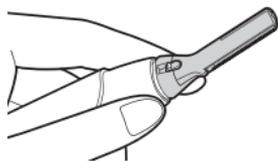

Removing the blade


1. Slide the blade locker as indicated by the arrow.

- It is easier to slide it with your nail.

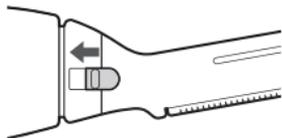


2. Remove it in the arrow direction.

- You can remove it easily by raising the protrusion (e) with your fingernail.
- Be careful not to drop the blade.

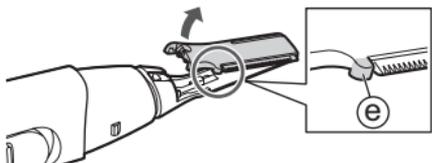


Mounting the blade

1. Insert the tiny hook (g) on the top of the main body into the hole (f) of the blade.

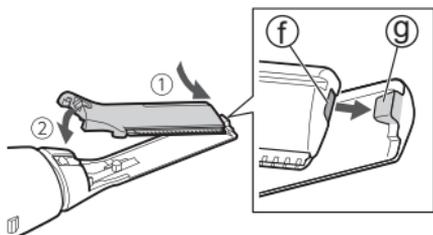

2. Slide the blade locker as indicated by the arrow.

- It is easier to slide it with your nail.

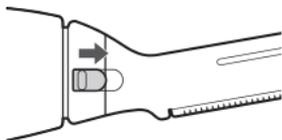

► Replacement part

Replacement part is available at your dealer or Service Centre.

Replacement part for ER-RP40	Blade	WES9280
------------------------------	-------	---------

Troubleshooting

Problem	Action
The appliance is not cutting as well as before.	► Replace the blade.
	► Replace with a new battery.
	► Clean off any remaining hair from the appliance.
The appliance is not working.	► Replace with a new battery.
	► Make sure the battery is installed correctly.

If the problems still cannot be solved, contact the store where you purchased the unit or a service centre authorized by Panasonic for repair.

Specifications

Power supply	Dry-cell battery
Battery type	One LR6 (AA alkaline battery) (Sold separately)
Airborne Acoustical Noise	66 (dB (A) re 1 pW)

Disposal of Old Equipment

Only for European Union and countries with recycling systems



This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local authority. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Panasonic Corporation
<http://www.panasonic.com>
© Panasonic Corporation 2021

© EN, GE, FR, IT, SP, DU, PT, SW, DA,
NW, FI, PL, CZ, SK, HU, RO, TK, GR

Printed in China
ER9700RP401503 S0621-0