

I LOVE MY PANASONIC I WANT TO PRESERVE IT

The secret to a long life for
your clipper?

Daily maintenance. It takes less
than 3 minutes.

MINIMUM
3 time
per day*
FREQUENCY

UPKEEP AND LUBRICATION OF THE CUTTING BLADE

 
1

Depending on the model, I place the
dial on **2 mm**, or **1.5 mm** for
the Fading ER-GP86, to remove
the cutting blade.



2

I remove the small hairs with
the Panasonic brush provided.

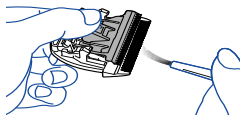

3

Then I lubricate using
the Panasonic Oil or **the Fresh
Oiler Maintenance Spray**, the only
formula recommended by Panasonic
for use on its clippers.



4

If necessary, for a refrigerant
action, I spray longer without
removing the cutting blade.



*When the clipper is new, you must lubricate the cutting blade
before its first use.



MAINTENANCE VIDEO

BATTERY INSTRUCTIONS

When the clippers are new, you must allow for **AN INITIAL CHARGING TIME** to optimize the performance of your batteries.

BEFORE THE FIRST USE



- ER-GP90
- ER-GP86
- ER-GP84
- ER-GP74
- ER-GP65
- ER-GP23
- ER-SP20
- ER-XT70



- ER-GP72
- ER-1512
- ER-1421



- ER-GP21

SUBSEQUENT RECHARGING TIME



- ER-GP86
- ER-GP84
- ER-GP74
- ER-GP65
- ER-1512
- ER-1421
- ER-GP23
- ER-SP20
- ER-XT70



- ER-GP90



- ER-GP21

CHARGE INDICATORS

At the initial charging, please wait for 2 or 3 minutes before red light appears.



When the battery level light blinks **green** or **white**, it's time to recharge your clipper.

The clipper can be used for 5 more minutes after this light flashes.



During the recharging, the light is **solid red**.



It **flashes red** or **light off** when the charge is **complete**